

## Frequently Asked Questions

### **FAQ 10016 - Can I run two or more chases simultaneously on the same fixture?**

To do this you must ensure that the fixtures have been recorded 'BY CHANNEL' so that one chase does not interfere with the other.

It is however easy to convert a chase which has been recorded 'BY FIXTURE' to 'BY CHANNEL'.

Following the steps below :-

- Photocopy your chase to a spare playback, then if you don't like the results you can easily go back to the original chase(s).
- Now for each chase do the following :-
  - Turn the Key to Program
  - Press UNFOLD
  - Press the playback SWOP button above the chase you wish to modify.
  - Select the fixture you are using in the chase.
  - Switch OFF the attributes that are NOT required in the chase. These will be the attributes you are moving from another chase. You do this by pressing the ON/OFF button so that the green LED in the ALIGN button is ON, and the red LED is off.
  - Finally press softkey A 'RECORD' button followed by the playback SWOP button for the first step.
  - Repeat this for each step.
  - To close the chase press the UNFOLD button again and press CLEAR twice.

You may need to do this for all the chases you are expecting to run simultaneously.