

Frequently Asked Questions

FAQ 10013 - What does the Avolites Button do?

- o The Avolites button is used mainly to patch onto the top row of faders i.e. Faders 31 - 60. The AVO Button needs to be pressed while making the patch.

- o The AVO Button can also access a sub menu, each sub menu can be accessed by pressing the 'SOFTKEYS' beside it.
The sub menu allows you to make the following changes
 - o The preset LED's can be programmed to either mimic the dimmer output levels or show the state of the fixture, whether the fixture is selected or not.
 - o If a fixture is selected the LED will be lit at 100%, if the fixture is de-selected the LED will be lit at 50% and when the fixture is not selected at all the LED will be lit at 0%.
 - o You can also make the desk CHASE CONTROL ENABLED or FIXTURE CONTROL ENABLED from the menu.
 - o From this menu you can access the USER SETTINGS straight away.