


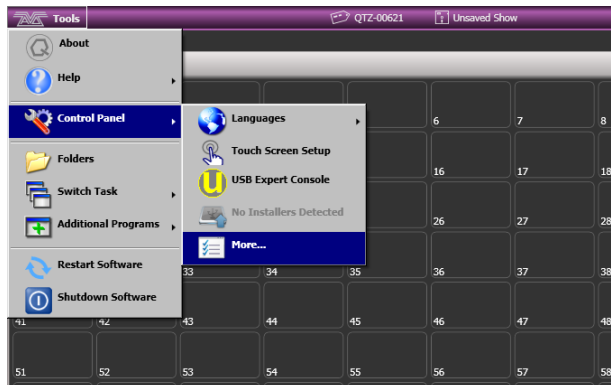
## Avolites LTD Engineering Change Notice

ECN title	Quartz Paging File Move		
ECN Number	ECN-205		
Related Product(s)	All Quartz consoles		
Date / Author	17/12/2015	Toby Roworth	
Reasons for ECN	Console displays out of disk space message		
Parts required			
Tools required			
Estimated time	15 Minutes		


### Background:

The Quartz console may display the out of disk space message for drive c: and running a recovery disk does not resolve the issue. The following fix will clear the error by creating additional space on the C: drive. *This will have to be carried out after each recovery.*


1. Open *Tools*
2. Select *Control Panel > More...*




3. Select *System > Advanced System Settings*
4. Select the *Advanced* tab
5. Under *Performance* press *Settings...*

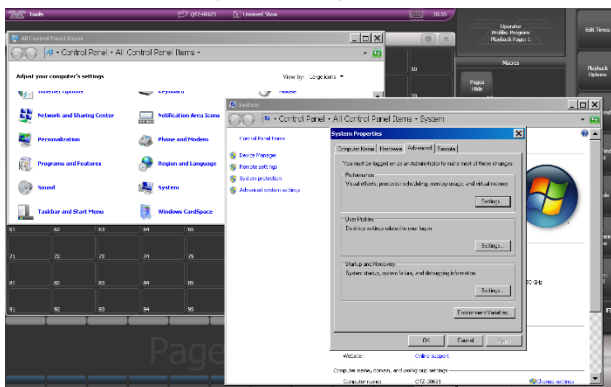

6. Select the *Advanced* tab
7. Press *Change*
8. Un-tick “Automatically manage paging file size for all drives”
9. Select C: drive a check “No Paging file”
10. Press Set, and press “yes” in the dialogue

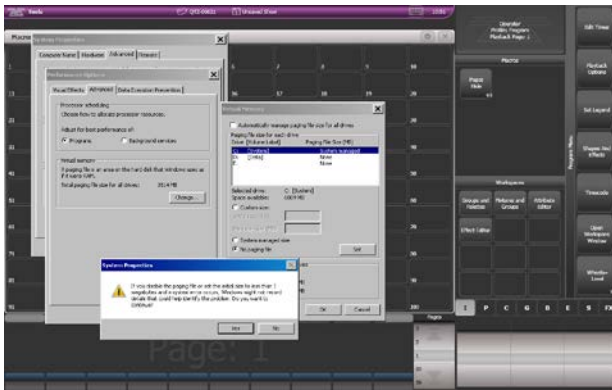

11. Select D: drive and check “System Managed Size”
12. Press Set

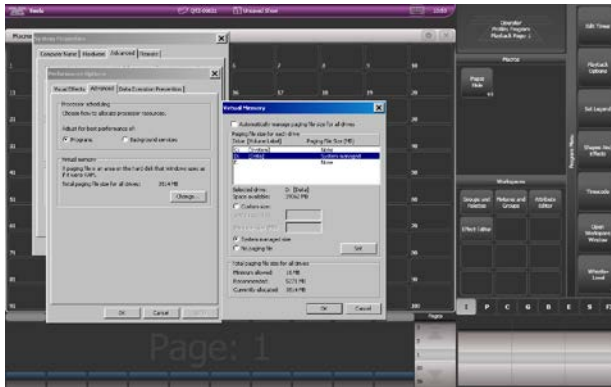

13. Press OK and exit all other windows
14. Restart the console
15. After re-boot the drive full message should not appear

This concludes the ECN.